



1

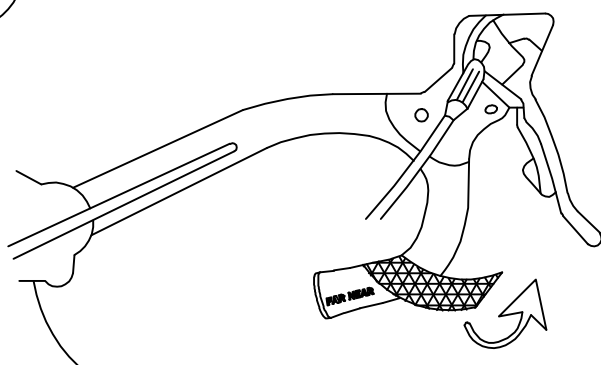

Start wrapping the tape 30~40mm from the end of bar. Wrap the bar as normal.

2

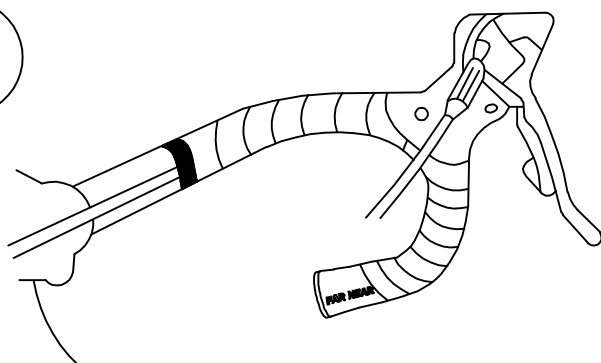

When the bar is fully wrapped and the tape fastened , push the Far and Near bar end cap into place so that it overlaps the start of the bar.